

BroadStreamTV

Translite Android TV Box



- **Inside you'll find:**
- **Quick setup & registration**
- **Live TV basics & Channel Guide**
- **RePlay TV & Recordings (Cloud DVR)**
- **Search, Favorites, Autotune & Parental Controls**
- **Voice control & Closed Captions**

Table of Contents

Welcome to BroadStreamTV	3
What You'll Need For Setup	4
One-Page Quick Start.....	5
Installation and Setup (Part 1)	6
Installation and Setup (Part 2)	7
Your Remote Control	8
Live TV Basics	9
Restart a Show & Record Live TV	10
The BroadStreamTV Menu	11
The Channel Guide	12
Search	13
Cloud DVR: Recording a Show	14
Cloud DVR: Watching Recordings	15
RePlay TV	16
Favorites	17
Autotune	18
Using Your Voice	19
Closed Captions	20
Weather	21
Quick Reference	22
Troubleshooting	23

Welcome to BroadStreamTV

You now have access to a simple and powerful TV experience with live channels, a smart guide, cloud recordings, and RePlay TV. This booklet gives you clear steps to get started and answers to common questions.

BroadStreamTV runs on the Translite TL-4KBR Android TV box. If you have used cable TV before, this will feel familiar. Your remote works just like a traditional remote with channel buttons, volume, and a guide.

androidtv



firetv

What You'll Need For Setup

Included in your setup:

1. Translite TV Box and Remote
2. Power Adapter (12V DC — NOT USB)
3. Two AAA Batteries
4. HDMI Cable



1



2



3



4

One-Page Quick Start


★ Step 1 – Plug in the box

Connect the HDMI cable from the Translite box to your TV. Plug the power adapter into a wall outlet.




★ Step 2 – Connect to WiFi

Use your Translite remote to go to Settings. Choose your WiFi network and enter the password.

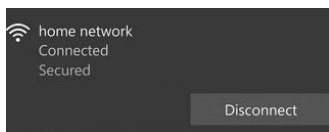


★ Step 3 – Open the BroadStreamTV app

Look for the BroadStreamTV icon on your home screen. If you do not see it, open the Google Play Store and search for BroadStream.

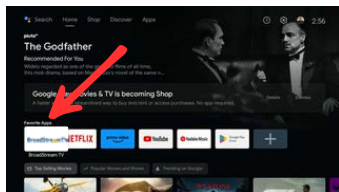

★ Step 4 – Sign in and start watching

Enter the username and password from your welcome email. That's it- you're watching TV!

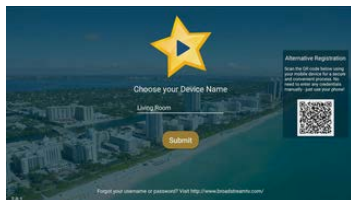

Need help fast?

Call BroadStar Support at (877) 207-4188
or email customerservice@broadstar.com

Installation and Setup

Translite TV Box Setup (Part 1)

STEP-BY-STEP

1. Connect the HDMI Cable

- ★ Plug one end of the HDMI cable (the cable that connects your box to your TV) into the back of the Translite box.
- ★ Plug the other end into an open HDMI port on your TV.



2. Plug in the Power Adapter

- ★ Connect the power adapter to the DC port on the back of the Translite box. Plug the other end into a wall outlet.
- ★ WARNING: Do NOT use your TV's USB port for power. The Translite box requires its own 12V DC power adapter.




3. Insert Batteries and Pair the Remote

- ★ Slide off the back cover and insert two AAA batteries. To pair: press and hold OK and Volume Down at the same time for about 10 seconds until the red light blinks.
- ★ Keep the remote within 3 feet of the box.



4. Choose Your Language

- ★ Use the arrows on your remote to highlight English, then press OK.

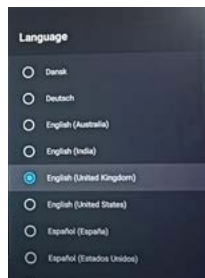


Installation and Setup

Translite TV Box Setup (Part 2)

5. Connect to WiFi (your wireless internet)

★ The box will scan for WiFi networks. Use the arrows to find your network name, press OK, and type your WiFi password.

★ A check mark means you are connected. You can also use an Ethernet cable for a wired connection.

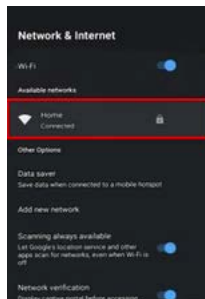


6. Google Sign-In (Optional)

★ The box may ask you to sign into Google. This step is optional. You can skip it and still use BroadStreamTV.

7. Open BroadStreamTV and Sign In


★ Look for the BroadStreamTV app on your home screen. If you do not see it, go to the Google Play Store, search for BroadStream, and press Install.

★ Open the app and enter the username and password.

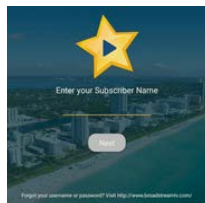

8. Let It Update

★ The box may download updates. Do not unplug the box during this step. When it is done, live TV will start automatically. That's it!

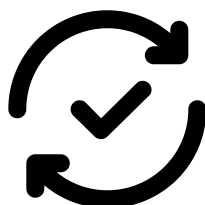

Remote at a Glance

Translite Remote

Power- Turns the Translite and your TV on and off

Number Pad- Use to type in channel numbers

Prime Video- Opens the Prime Video app

Apps- pulls up the apps on your homescreen without having to leave your current apps

Voice Command- Hold down to just tell your TV what to do

Back- Gets you out of whatever screen you've gotten yourself into

Play/Pause- stops and starts live tv or recordings

Volume Up and Down- Makes your TV louder or softer

Quick Buttons- Gets you directly to various apps/functions.
Note: these are liable to change depending on when you get your remote.

Input- Changes the source of what your TV is showing

Last- Switches back to the most recent previous channel you were watching

Translite Settings- Note: this is different than your TV or app settings

D Pad Arrows- Use to navigate the Translite and the BroadStreamTV App

OK- Press this to select a highlighted button


Live TV- Switches back to what's playing now

Home- Takes you back to the Translite dashboard

Closed Captions- Turns on/off captions and subtitles, as available

Channel Up and Down- Changes the channels one at a time

Mute- Instantly turns off the volume

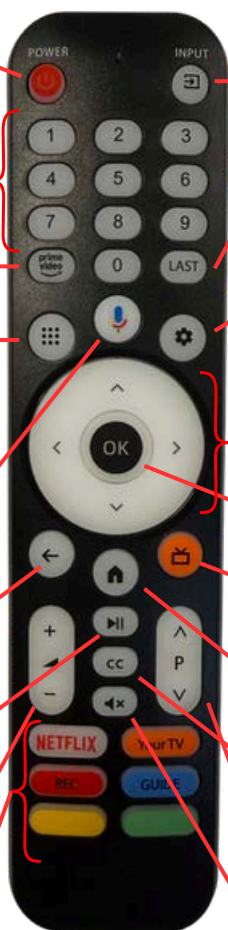


To Pair with your TV: Hold OK + Volume Down at the same time for 10 seconds

Live TV Basics

★ **Change the Channel:**


Use the Channel Up or Down arrows on your remote to move one channel at a time. You can also type a channel number using the number buttons on your remote.

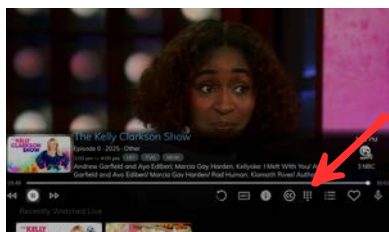


★ **Press LAST** to go back to the channel you were just watching.

★ **Current Channel Info:**

Press OK to see a card with the show name, time, and description. From this card you can also Restart the show, Record it, set Autotune, or turn on Closed Captions.

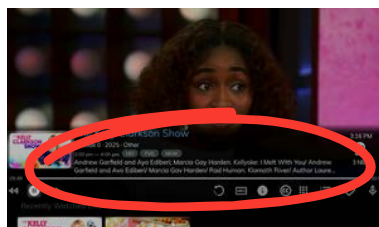


★ **To see Recently Watched channels,** hold the Left arrow while the info card is open.

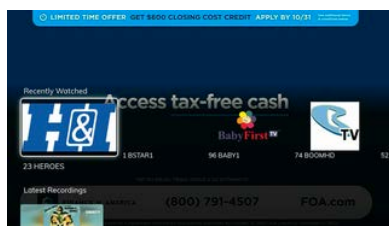

Restart a Show & Record Live TV


★ Restart a Show:

While watching a show, press OK to pull up the info card. Use the Right arrow to highlight the Restart button (it looks like a circular arrow). Press OK to start the show over from the beginning.

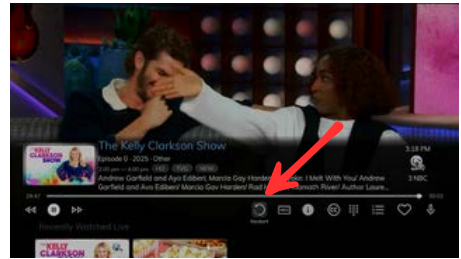

★ Record Live TV:

While watching a show, press OK to pull up the info card. Use the Right arrow to highlight the Record button (it says REC). Press OK to start recording.

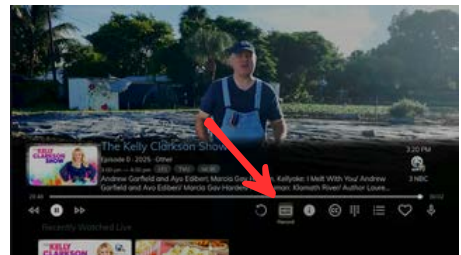

★ **Note:** to record a show that airs in the past or future, use the Guide.



The BroadStreamTV Menu


How to open the menu:

Press the Right arrow on your remote while watching live TV. The menu will appear on the right side of the screen. Press Back to close it.



1. **Guide** - See what's on, past, present, and future
2. **Recordings** – watch and manage your cloud DVR
3. **RePlay TV** – start shows from the beginning for channels that support it
4. **Weather** – 6 to 10 day forecast when enabled
5. **Search** – find programs by title, description, or people
6. **Settings** – Favorites, Autotune, Parental Controls, Account
7. **Exit** – log out of the app

The Channel Guide

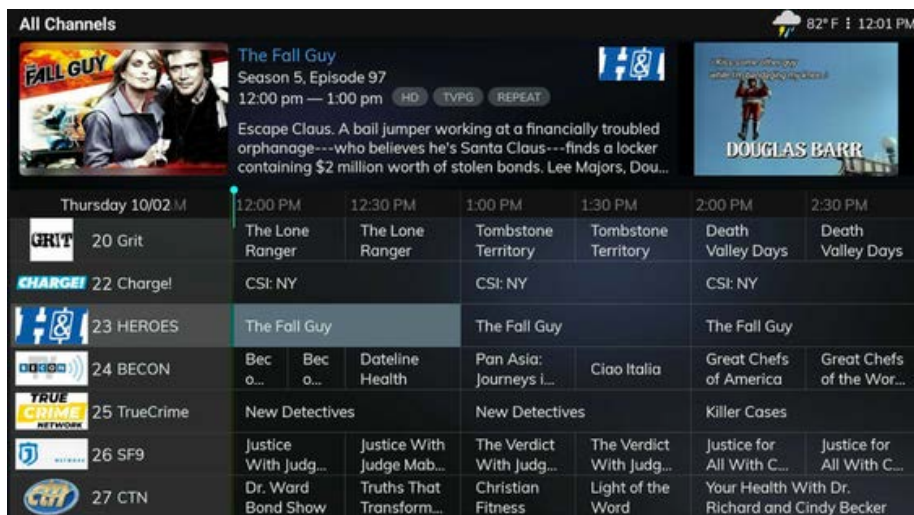

While watching TV, press the Right arrow to open the menu. Use the arrows to highlight Guide and press OK. You can also press the GUIDE button on your remote.

From the Guide, you can:



- ★ View Channel – tune to live TV
- ★ Record – movies, single episodes, or whole series
- ★ Autotune – set a reminder that tunes to a future program when the program starts

How to switch views: Open the menu, go to Settings, then Advanced, then Guide Type. Choose Classic or Enhanced.



Search

- ★ Find live, upcoming, RePlay, and Recordings in one place.
- ★ Open the Menu and choose Search. Type a word or phrase. You do not need to spell the full name. Results are grouped by type: All, Programs, Recordings, RePlay TV, VOD.
- ★ Voice Search: Press and hold the Microphone button on your remote, say the show name, then let go.

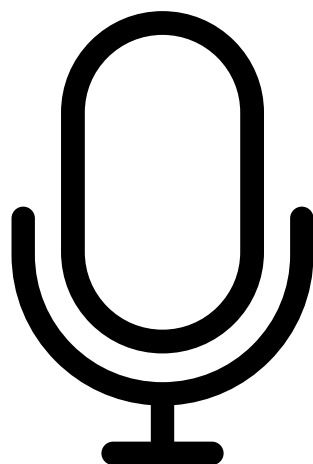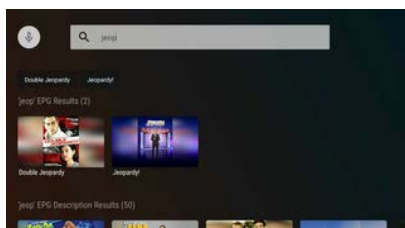


Cloud DVR: Recording a Show

Record single episodes or entire series. You can set rules like new episodes only, how many episodes to keep, and when to start or stop recording.


Set a recording from the Guide

- ★ Highlight a program.
- ★ Press and hold OK to open the info window.
- ★ Choose Record.
- ★ Pick Record series or Record program.
- ★ Adjust options (you can begin recording up to 30 minutes before or 45 minutes after it is scheduled to begin).
- ★ Press OK to confirm.

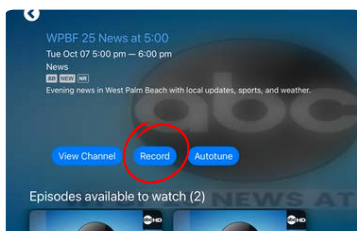

Set a Recording from Live TV

- ★ While watching a show, press OK on your remote to pull up options.
- ★ Use the Right arrow to highlight the Record button (it says REC) and press OK to record.
- ★ You can also press the REC button on your remote.
- ★ Note: to record a show that airs in the past or future, use the Guide.

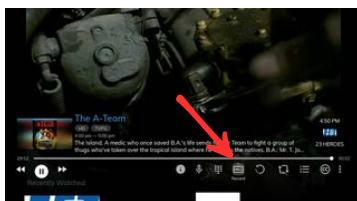



Cloud DVR: Watching Recordings

Open Recordings from the Menu to see:

- ★ My Series — all series you track
- ★ Latest — recently recorded
- ★ Expiring Soon — recordings that will be removed soon
- ★ Single Recordings — single episodes and movies

Select a title to:

- ★ Play
- ★ Delete or Delete Series
- ★ Modify — change how long to keep or adjust recording times
- ★ Cancel Series — stop future series recordings

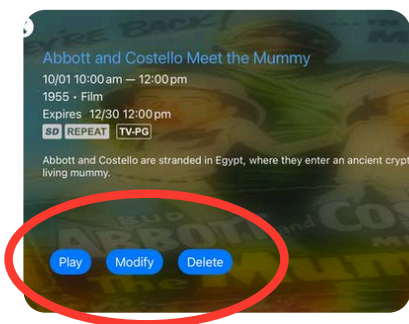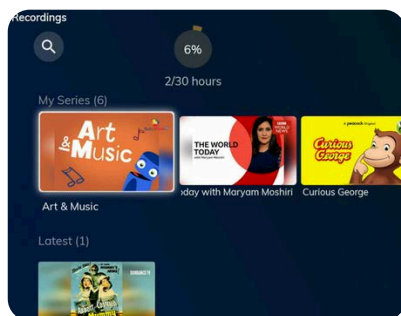


Note: Recordings will automatically delete after six months.

RePlay TV

Start live programs from the beginning and browse recent programs by channel.

- ★ From the Guide, use the navigation buttons on your remote to highlight a previously aired program that you would like to watch and press OK on your remote.

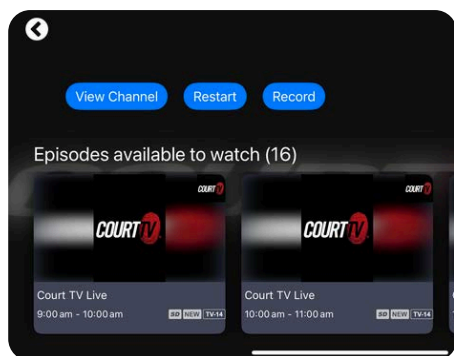

- ★ Alternatively, you can go to RePlay TV from the menu, search or choose a channel row, then pick a program.

- ★ While watching a RePlay program, you can pause, rewind, or fast forward within allowed limits.

- ★ Note: While watching RePlay TV, the program can only be changed through the guide or the Quick List.




Favorites

Create and use channel lists so each person sees what they love.


Create a Favorites list

- ★ Open the Menu. Go to Settings, then Favorites. Choose Create Favorite List and give it a name.

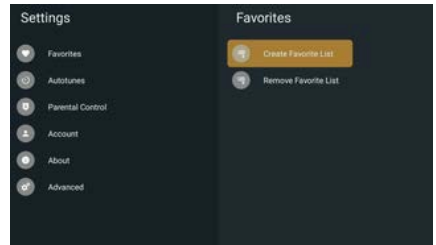


Add or remove channels

- ★ Check the boxes next to the channels you want. Press OK when done.
- ★ To remove a list, go back to Settings, then Favorites, then Remove Favorite List.

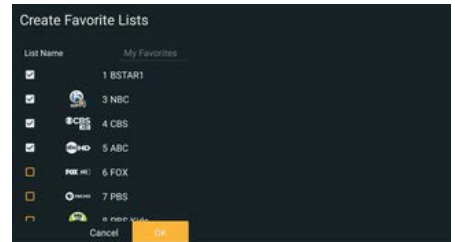

Use Favorites

- ★ In the Guide or Channels view, hold the Back button to switch to your Favorites view.

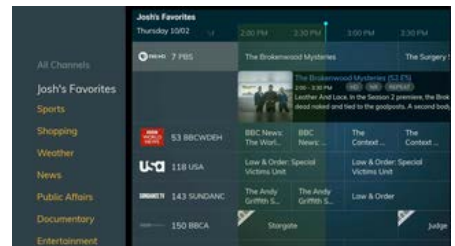


Autotune

Autotune tunes to a future program at start time. You can set it for a single episode or a series.


Set From the Guide

- ★ From the Guide, highlight a show that will air in the future. Press and hold OK. Choose Autotune.
- ★ Pick Autotune Program for this one airing, or Series Autotune to tune in every time the series comes on.
- ★ Press OK to confirm.

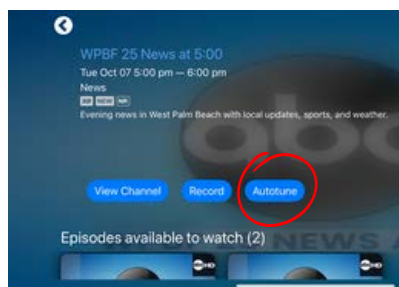

Cancel

- ★ Go to Settings, then Autotune Lists. Check the box next to the show and press OK.
- ★ Or find the show in the Guide and cancel from there.

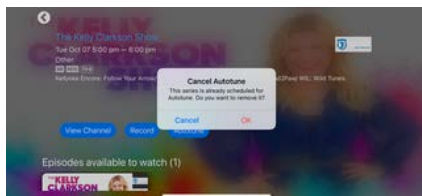

Using Your Voice

Press and hold the Microphone button on your Translite remote. Say what you want, then let go.

★ Try these phrases:

★ "Tune to CBS"

★ "Open Guide"

★ "Record"

★ "Restart program"


★ "Closed captions on"

★ "Search for Jeopardy"

★ Voice commands work on the Translite Android



TV remote only. You must be in the

BroadStreamTV app for TV commands to work.

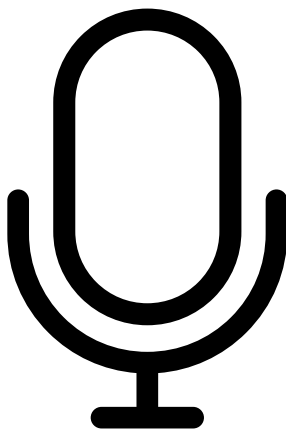

Closed Captions

- ★ Turn captions on by pressing OK while watching live tv and navigating to the CC button in the overlay.
- ★ To select additional closed captioning options, press and hold the OK button while the CC button is highlighted.
- ★ Choose style and size on supported devices, and choose between a transparent background for captions or a black background for readability
- ★ Voice control is only available on Android TV devices

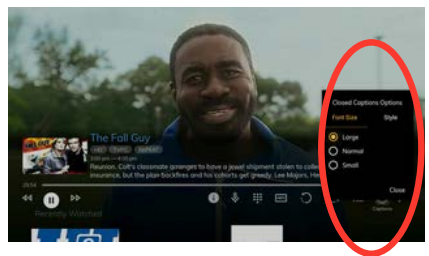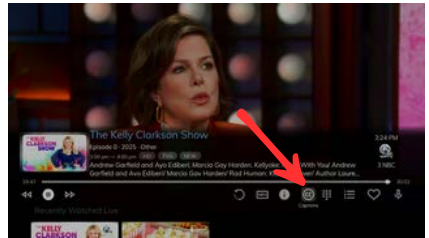

Weather

The Weather feature is located in the menu. These features make your BroadStreamTV experience more connected to your household.

Weather

- ★ Access via Menu > Weather.
- ★ Choose your desired location.
- ★ View a 6 to 10 day forecast with daily highs, lows, and condition icons.



Quick Reference

Navigation

- ★ Menu: Press Right arrow or GUIDE button
- ★ Back: Press Back button
- ★ Info: Press OK while watching
- ★ Voice: Press and hold Microphone button
- ★ Closed Captions: Press OK → CC (hold OK for options)

DVR & RePlay

- ★ Record from Guide: Highlight → Hold OK → Record
- ★ Manage Recordings: Menu → Recordings (Series, Latest, Expiring, Single)
- ★ RePlay TV: Menu → RePlay TV or pick past program in Guide

Live TV

- ★ Change Channel: Up/Down arrows or number pad
- ★ Restart Program: Press OK → Restart icon
- ★ Record Live: Press OK → REC icon (or REC button)
- ★ Guide: Menu → Guide or press GUIDE button
- ★ Guide Options: View, Record, Autotune

Troubleshooting

Can't Sign In?

- ★ Check your username and password from your welcome email.
- ★ Make sure your WiFi is connected.
- ★ Close the app and reopen it.
- ★ If the problem continues, restart the Translite box by unplugging it for 10 seconds.

No Video or Audio?

- ★ Check that your TV is set to the correct HDMI input.
- ★ Try a different channel.
- ★ Check that all cables are firmly connected.
- ★ Unplug the Translite box for 10 seconds and plug it back in.

Remote Not Working?

- ★ Check that the batteries are fresh.
- ★ Re-pair the remote: press and hold OK and Volume Down for 10 seconds until the red light blinks.

Buffering?

- ★ Check your WiFi signal.
- ★ Try connecting with an Ethernet cable.
- ★ Restart your router.

Can't Find the App?

- ★ Open the Google Play Store. Search for BroadStream. Press Install.



Need Help? We're Here for You!

Phone: (877) 207-4188

Email: customerservice@broadstar.com

Website: broadstar.com/find-your-community

Support Hours:

Mon–Sat 8am–Midnight | Sun 8am–10pm

Your BroadStar team is always just a phone call away.

Scan this QR code to visit your community's dedicated support page:



broadstar.com/find-your-community